

PROFESSIONAL BEAUTY  
**wad**

# Zefir Black Silver Hair Clipper

USER MANUAL MODEL CW003

(VERSION 202210)



## Thank you for purchasing this product

We are sure you will appreciate the care taken in designing and implementing it. We constantly research and combine innovation and technology to create high-quality products. We apply the most advanced methods and use the best materials to always obtain excellent performance. We offer products designed for the most demanding customers who want to achieve excellent results. **Read these instructions carefully before using the appliance and keep them for future reference.**

## Warnings

Please read the following warnings and the rest of the manual carefully before using the appliance.

1. Give sufficient time for the battery to fully charge.
2. This product contains batteries that cannot be replaced by the user. Batteries may only be replaced by service or qualified persons.
3. The cutting machine should be used only with the supplied power supply (MODEL LW-050100EU).
4. **IMPORTANT! Cleaning and maintenance of this appliance must not be carried out by children without supervision.** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the cutting machine.
5. **This appliance is intended for professional use.**

**IMPORTANT! Failure to follow all these warnings and instructions may cause irreparable damage to the product and jeopardize the user's safety.**



This symbol indicates that this product should not be treated as normal household waste. Once you have decided to dispose of it, you should take it to a dedicated collection point for the recycling of electrical appliances. By recycling batteries and electrical appliances correctly, we help to prevent health hazards and protect the environment.

If this product is irreparably damaged or, for any reason, its useful life is deemed to have expired, please have a look at local, state and European regulations regarding the proper disposal and recycling of products containing lead, batteries, plastics and other materials, as well as collection points for these types of products.



This product contains Lithium-Ion batteries.



This product complies with the CE Marking. You can find the European Declaration of Conformity on the web link [wadprofessional.com/wad-zefir-black-silver-hair-trimmer-ce.pdf](http://wadprofessional.com/wad-zefir-black-silver-hair-trimmer-ce.pdf).

This manual is available in digital format at [wadprofessional.com/wad-zefir-black-silver-hair-trimmer-user-manual.pdf](http://wadprofessional.com/wad-zefir-black-silver-hair-trimmer-user-manual.pdf).

# Technical specifications

## Zefir Black Silver Cutting Machine





(MODEL CW003)

- Input voltage of AC/DC adapter 100-240 V
- Frequency 50/60Hz, 0,2 A
- Power 10 W
- Engine speed 7200 rpm
- DC motor with carbon brushes
- 2500 mAh lithium battery
- 3-4 hours working time
- Charging time 3 hours
- Powder metal die-cast upper blade.
- Ceramic lower blade
- 6 combs 0.5 / 1.5 / 3 / 6 / 9 / 12 mm
- Slat temperature <45°C
- Lifetime 1200 hours
- Weight 274 g
- Noise <68 dB
- Includes lubricant and brush



BDN Cosmetics S.L. · C/ de la Mora 22  
08918 Badalona, Spain

## Instructions for use

COMPONENTS:

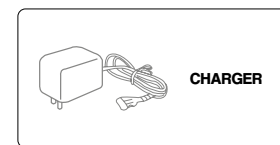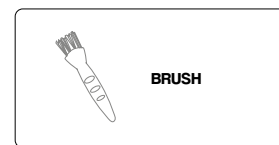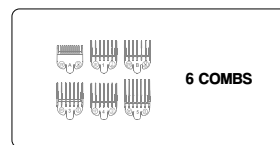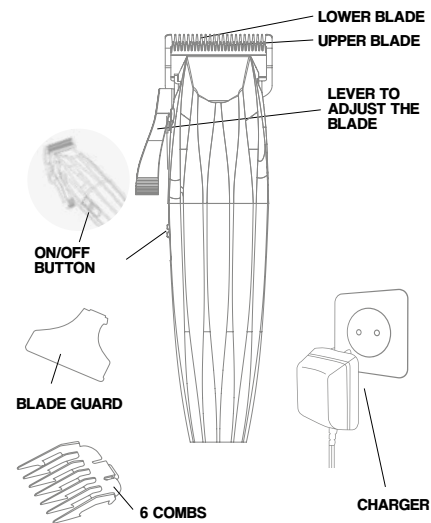


## How to load the machine

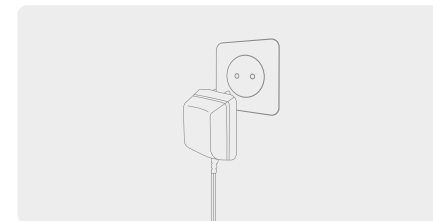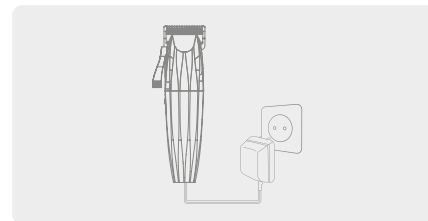  

## Cut with 7 measures


You can use the machine to cut without a comb or you can use one of the 6 combs with sizes 0.5, 1.5, 3, 6, 9 and 12 mm. To adjust the hair size, just select the right comb.

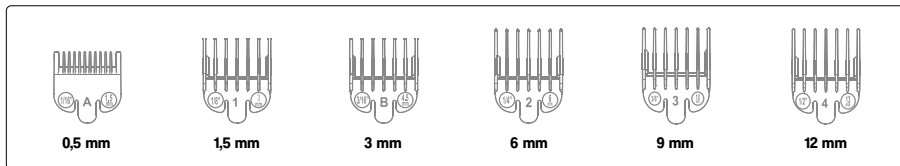

## Use of the cutting machine

1

Before using the machine, put a few drops of lubricating oil on the blades.

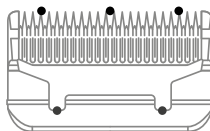

2

Press the power button to start the blades.

3

Pass the machine over the desired cutting area.


4

Press the off button when the work is finished.

## Adjustment of blades and combs


### To adjust the blade:

• To adjust the blade, move the lever from front to back.

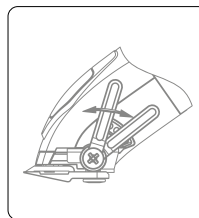

### For mounting the combs:

• Align the edge of the comb with the edge of the blade and push forward slightly to assemble.

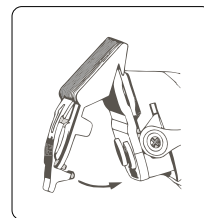

### To dismantle the combs:

• Simply pull the comb tightly.

## Removal and installation of the blades


You will see in the drawing that the lower blade holes are larger than the shanks of the blade screws. Loosen the screws, align the lower blade with the upper blade and tighten the screws firmly.



(1) The end of the upper blade teeth should be 0.5 to 1 mm behind the lower blade. This is important so that the razor does not cut too close or allow the moving blade to touch the skin.


(2) The left end tooth of the upper blade must cover or be to the left of the first small tooth of the lower blade.

(3) The right end tooth of the upper blade must touch the large tooth of the lower blade.

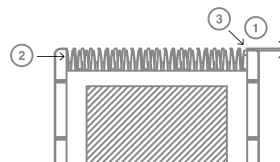



## Conical lever

- The cutting machine is equipped with an adjustable conical lever that changes the height of your cut.
- When the lever is in the highest position, the blades will give the tightest cut.
- Pushing the lever down gradually increases the cutting length.

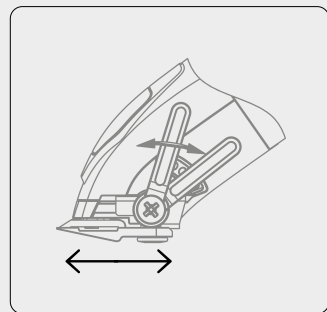

## Cleaning and Maintenance


### Blade alignment

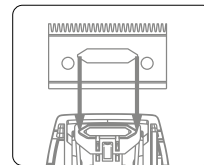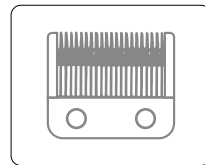

- The blades are greased and aligned before leaving the factory.
- They should be realigned if they have been removed for cleaning or replacement.
- To realign the blades, simply match the teeth of the upper and lower blades, point for point. The end of the upper blade teeth should be approximately 0.5 to 1 mm behind the lower blade. Compare the blades of your cutting machine with the drawing.
- If the blade alignment is incorrect, add a few drops of oil to the blade, switch on the cutting machine for a few moments, switch it off and unplug it. Loosen the screws slightly and adjust the alignment. Tighten the screws after the blade is aligned.


### Cleaning the blades:

- Clean the blades with the cleaning brush provided.

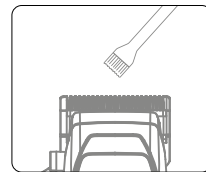

### Blade maintenance:


- To keep your clipper in top condition, the blades should be oiled every few haircuts.
- For proper oiling, the unit should be held so that the blades are in a downward position. With the machine blade in operation, pour 2 or 3 drops of oil on the upper blade.

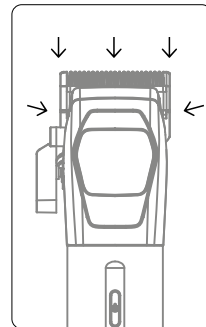

## Precautions




- 1** Do not disassemble the product.

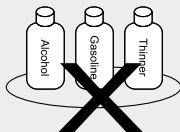

- 3** Use a small damp cloth or neutral liquid soap to clean the product. Do not use solvents.



- 2** Water should not be used to wash the cutting machine. Keep it away from moisture while in operation.

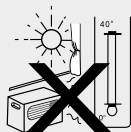

- 4** Never recharge the machine at temperatures above 35°C or below 5°C.

**IS IT NORMAL FOR THE MACHINE TO OVERHEAT SLIGHTLY DURING USE OR RECHARGING.**

## Guarantee

This document from BDN Cosmetics S.L. is valid as a guaranteed certificate for the product. All claims must be made to:

 
BDN Cosmetics S.L.  
C/ de la Mora 22  
08918 Badalona, Spain

**The warranty period against manufacturing defects is 6 months from the date of purchase.** The warranty does not cover damage resulting from improper use of the product or failure to follow the manufacturer's instructions.

The battery and the blade are quick-wear parts and are excluded from the warranty.

Date of acquisition:

Signature and stamp of the sales outlet:





PROFESSIONAL BEAUTY  
**wad**

VISIT US:  
**wadprofessional.com**