

**NEW UPGRADED SALON EXPERT**

**NAIL MACHINE**




**Technical data:**

<b>Rated voltage</b>	<b>220V/240V</b>
<b>Electric power</b>	<b>40W</b>
<b>Rated frequency</b>	<b>50/60HZ</b>
<b>Number of fans</b>	<b>1</b>
<b>Product size</b>	<b>23x18x8 cm</b>

**Note**

- ☐1. canister filter is reusable. Keep in mind, however, that in the filter become clogged pores, causing poor air flow, in consequence of the canister stops its features. In such circumstances, also the fans are subject to ponadnormatywnemu load which could cause the device failure.
- ☐2. clean the filter regularly, and too worn replace with a new one.
- ☐3. It is not allowed to use the appliance near bathtubs, washbasins or other wet dishes
- ☐4. When connecting the plug do not touch the metal parts.
- ☐5. You should periodically clean the device to prevent the accumulation of dirt, dust and other unwanted substances. The accumulation of these may lead to malfunction of the device or even hardware damage.
- ☐6. It is not allowed to wrap the power cord around the unit, it may cause a malfunction.
- ☐7. Always make sure that the device is powered from a source with the correct rated voltage. Make sure that the plug has been properly inserted into the wall outlet. Failure can result in fire, electric shock or burns
- ☐8. You cannot connect and disconnect the device from the outlet with wet or with wet hands.
- ☐9. do not use the device under the following conditions:
  - o Kiedy a wire or plug heats up or is corrupted;
  - o Kiedy plug is loose in the socket;
- ☐10. You cannot modify, extend, excessively bend or twist the cable.
- ☐11. You cannot place anything heavy on the cord.
- ☐12. Prevent getting dust or other harmful elements into the plugin.
- ☐13. do not use or store the device in the bathroom or other high humidity areas. This can result in electric shock, fire or damage to the insulation.
- ☐14. Do not allow children to use the device.
- ☐15. Ne use the unit near flammable substances such as alcohol, solvents, gasoline, aerosols, spray etc. This can result in an explosion or fire.
- ☐16. do not hit and throw your device. If the device is damaged as a result of impact or fall, you can not continue its use.
- ☐17. do not attempt to disassemble or repair the equipment. For repair, contact the distributor from whom the equipment was purchased or authorized service center.

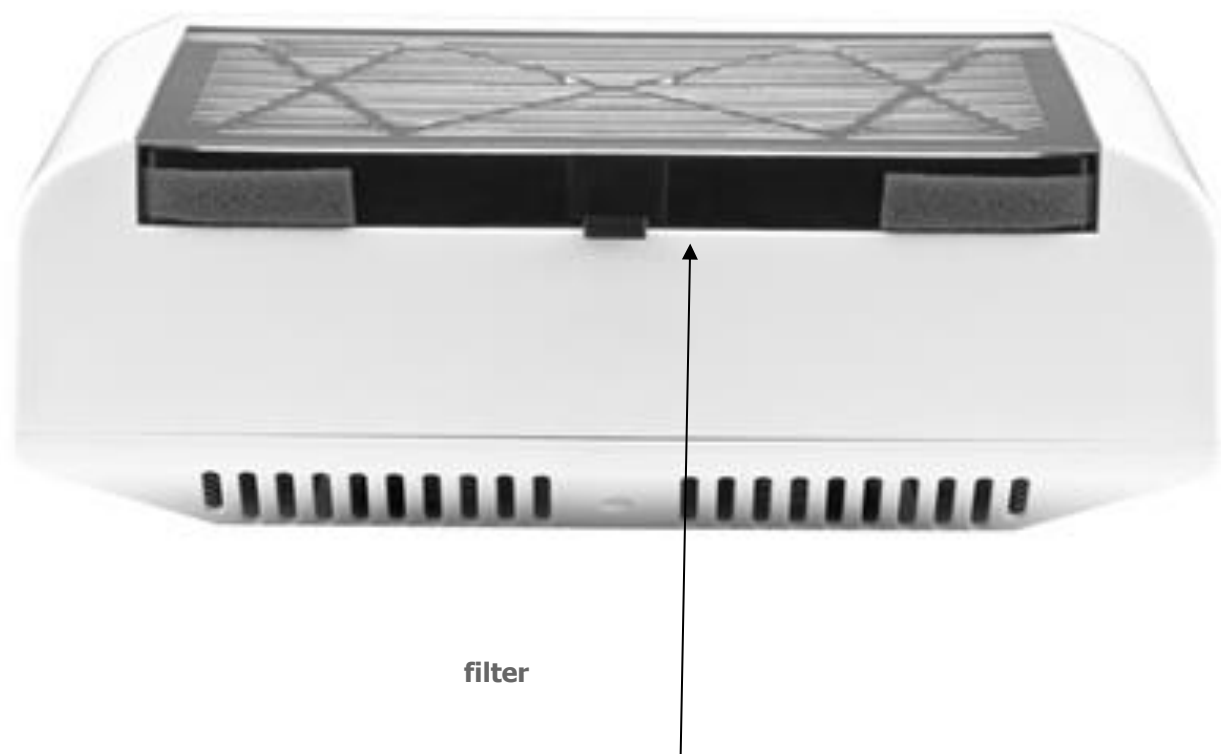

#### **User manual**

- 1. place the filter inside the unit.**
- 2. Place the device on a level and stable surface.**
- 3. connect the power plug to a suitable power source.**
- 4. Za using the power switch, restart the device and enjoy trouble-free work, bearing in mind the regular care for the cleanliness of the filter.**

#### **safety measures**

- 1. must not put anything into the opening in the device. when the foreign object gets to remove the wire from the socket hole and contact the distributor or manufacturer.**

**2. not be placed on a shelf device unstable, or vehicle. if the device can be damaged.**

**3. in order to guarantee period is recommended to keep the suitability of one minute before the repeat button power (between inclusion and exclusion, and vice versa).**

**4. power must comply with the specifications set on the plate. otherwise there is a risk of incorrect action of its damage, and even burn.**

**note:**

**1. in the event of a failure of power supply or other accident, contact the authorized service, this will avoid the risk.**

**2. this device can be operated by children aged 8 years and by persons with reduced physical capacity, mental and person of lack of experience and knowledge of the equipment if there is supervision or instruction regarding the use of equipment in a safe manner, so that the related risks were understandable.**

**3. the device is not intended for play by children. don't allow children to play with the device.**

**4. don't leave the device without supervision, when children or persons who do not have sufficient knowledge in the use of the device are located in the vicinity.**

**5. this electrical device is not a toy. incorrect use or contact with the electrical device may be a risk of loss of health or lead to death, therefore, the device should use and keep out of reach of children.**

**disposal device**



**waste electrical equipment, instrumentation and packaging should be transmitted to the centres of recycling raw materials in accordance with the principles of the protection of the environment. electrical equipment should not be put in containers of pet waste. should be in accordance with the rules of this type of equipment. in order to protect the environment in accordance with directive 2012 / 19 / ec on waste electrical and electronic equipment waste electrical appliances must be collected separately, and then transmitted to the collection points of waste equipment el ektronicznego and electrical.**

**at the end of the service, as well as old devices contain nutritious elements suitable for recycling, therefore, should be to give them for reprocessing. therefore, should be submitted to the relevant collection points, and it can also provide the company thomas pacholczyk activ.**

**storage and transport**

**the device should be transported in temperature range (-) 20 degrees to 50 degrees (+) only in the original container. store the device in a well ventilated and relative humidity of not more than 75%. operating temperature (+) from 10 to 40 degrees c (+). during the processes of storage and transport, can't throw and drop device exposed to mechanical shocks or weathering.**