

10 Inch LED Ring Lighting Photo Studio Manual



Technical indicators

LED Number : 120pcs	Output Voltage : USB 5V
LED Outer Power : 8W	Color Temperature : 3200K-5600K
Ra : 85	Size : external diameter 26cm/ internal diameter 20cm
Lumen : 2006LM	

Usage:

1. Please install the LED ring lighting on the table bracket or lighting stand and adjust the light in the best lighting direction.

 


2. Connect the USB port to the USB power and connect the AC: 100-240V power supply.

3. Press the power button to turn on the ring light.

4. Adjusting the lighting direction by rotating the knob and color temperature.

5. Please install the LED ring lighting on the table bracket or lighting stand and adjust the light in the best lighting direction.

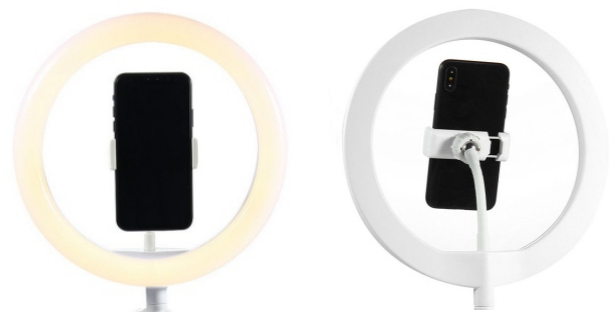

Product Components:



Ring light body: 120pcs LED

Mobile bracket : connector the ring light body and fix the mobile on it.

Angle adjustment part: adjust the ring light body up, down and rotate.

Table bracket: fixed the ring light on it

Power button: turn on / turn off the ring light.

Color temperature button: adjust color temperature from 3200K to 5600K.

Increase/Reduce button: adjust the LED lighting brightness

6. When use mobile bracket , please first insert M1/4" fixing screw of flexible tube into the middle of the lighting 1/4" inch fixed hole, and adjust the mobile bracket angle, then fix the mobile on it.

7. When you stop using, please press the power button to turn off the light.

Matters needing attention:

1. Please read the manual carefully and install the lighting according to the instruction sheet before using.

2. Please fix the lighting on the bracket.

3. The ring lighting shall be keep a dry and ventilated place.

4. When stop using please cut off the power to avoid the short circuit.

General breakdown service :

The question mention below is not certainly cause by the breakdown , pleas chock the lighting again before contact the distributor and manufacture.

Breakdown 1: The lighting can't turn on normal.

Check the battery and the adapter are install correct and working.

Check the power plug and lighting connector is tight or not.

Breakdown 2: The lighting is flicker.

Check the power input voltage is enough or not.