

Usage instructions:

WARNING-Always test temperature of the water before putting hands into the WAX MACHINE

1. Place the collar ring on the rim of the MACHINE.
- 2 Remove the plastic lid from the WAX MACHINE.
3. Adjust the wax-can holder on the wax can for easy handling
- 4.Turn the temperature control knob and set the dial on 100"until the wax achieves liquid condition.
- 5.This process lasts approximately 15 minutes for faster heating and place the lid on the warmer.
- 6.Once it becomes liquid, place the dial in middle place. The temperature remain constant throughout the day.
It is important to test the temeperature of the wax by placing a small quantity on the inside of wrist and adjusting the dial accordingly
- 7.When the wax is finished, take out the can. Using the wax-can holder while the warmer is still warm
8. Turn the warmer off every evening by full turning the dial counter clock
Cover the warme with the clear lid to keep the wax dust-free.
To clean the warmer, use wax clean the machine when it's off and whil warmer is still slightly warm
9. For a new usage, repeat steps 1 to 7.

CAUTION-EXTREMELY HOT WATER MAY CAUSE BURNS


For professional use only
For best results, be sure to read all instructions thoroughly before using the WAX MACHINE



Made in China



WAX HEATER
operation instruction

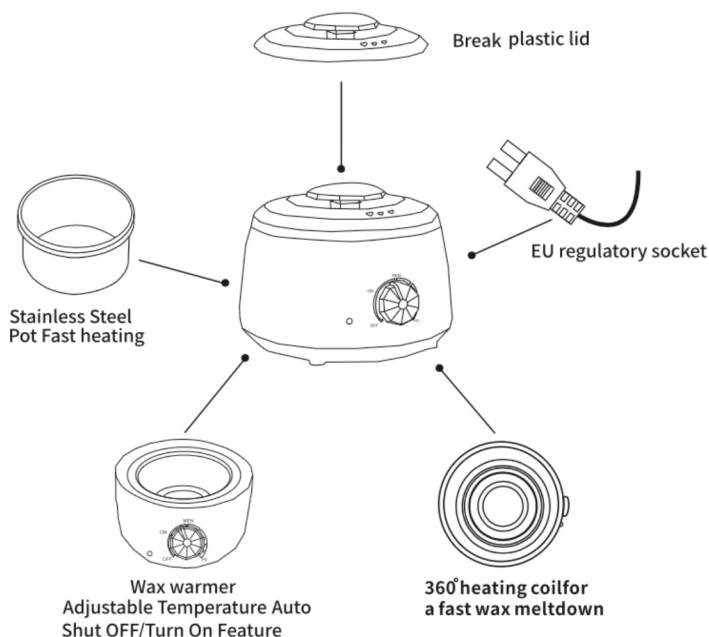

Important Safety Instructions

Note: When using any electrical appliance, especially when children are present, basic safety precautions should always be followed.

DETAILS OF THE INSTRUCTIONS BEFORE USING YOUR WAX MACHINE:

- 1.DO NOT place or store the device where it can fall or be pulled in the tub or sink
2. Do NOT place the wax spa into water or any liquid, Keep surrounding area dry
3. If the wax spa falls into water, unplug it immediately, DO NOT reach into the water
(As with all electrical devices, electrical parts are electrically live even when the switch is off,always use caution.)

WARNING: To reduce risk of burns, electrocution, fire of injury.

- 1.Never operate the device if
 - a.)It has a damaged cord or plug
 - b) If it is not working properly
 - c)If it has been dropped or damaged in any manner
 - d)Dropp into water.
2. Close supervision is important when the WAX MACHINE is used by, on or near children.
3. Keep the cord away from heated surfaces
- 4.DO NOT immerse the WAX MACHINE into water or other liquids
5. Avoid hanging the cord over a counter or table where it can be pulled on, by child ren or tripped over unintentionally
6. Always use the WAX MACHINE on a level surface
7. Unplug the device when not in use. Allow to cool before
8. Do nor wrap the cord around the WAX MACHINE when in use
9. Attachments not recommended by the manufacturer may cause hazards
10. Test temperature of the water before putting hand into the device
11. Use this WAX MACHINE only for its intended use as described in the instruction booklet