Turbine Brushless Nail Dust Collector

User manual


1.Standard Package List

- (1)Turbo Brushless Nail Dust Collector *1 pcs
- (2)Power adapter*1
- (3) Dust Collector Filter*1 pcs
- (4) Dust Collector Filter Cotton*10 pcs
- (5) Dust Collector Cleaning Brush*1 pcs

2. Function description

①DC port ②Display Screen

③Speed adjustment switch (4) Air outlets

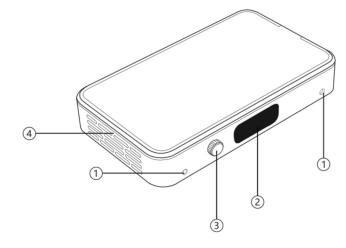

3.Product parameters

(1)24V2A fan

(2)P01 gear speed 2500rpm, P02 gear speed 2800rpm, P03 gear speed 3000rpm,

P04 gear speed 3300rpm, P05 gear speed 3500rpm

(3) Input Voltage: 100-240V ~ 50/60Hz

(4) Rated Input: 24V/2A (5) Rated Output: 24V/2A

(6) Product Size: 315*195*56mm

4.Instruction

- (1)Connect the adapter and enter the standby state;
- (2)The switch continues to rotate clockwise, the beep sounds the nail dust collector into the first gear (display P01);
- (3)The switch continues to rotate clockwise, the beep sounds the nail dust collector into the second gear (display P02);
- (4) The switch rotates clockwise again, the beep sounds the nail dust collector into the third gear (display P03);
- (5) The switch rotates clockwise again and the beep sounds to put the nail dust collectorer into the fourth gear (display P04);
- (6) The switch rotates clockwise again, the beep sounds the nail dust collector into the fifth gear (display P05);
- (7) When you turn on the machine to work, be sure to install the filter, mesh protective cover to ensure safety.

5.Attention

- (1) Do not disassemble and repair the machine without authorization to avoid the risk of use;
- (2) Please do not let the liquid or corrosive chemicals touch the machine;
- (3) When cleaning the machine filter dust, please disconnect the power supply before cleaning;
- (4) It is necessary to use the official adapter (24V2A), misuse is a potential safety hazard;
- (5)Please unplug the adapter to avoid potential danger if you do not use the machine for a long time;
- (6)Please turn off the machine before stopping work;
- (7) Please place the nail dust collector in a place where children should not touch it.



Warm Reminder: the nail dust collector will automatically stop working when the machine in the working state is removed from the metal mesh plate, while the display screen flashes.







