

# ACTIVESHOP<sup>®</sup>

## INSTRUCTIONS FOR USE

Mini pro203 milling machine



Importer  
ACTIVESHOP Sp. z o.o.  
ul. Graniczna 8b, bud DC2A  
54-610 Wrocław, Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/05/2024



## Note

- Clean the device periodically to prevent accumulation of dirt, dust and other undesirable substances. Accumulation of the above, may lead to malfunction of the device or even damage to the equipment.
- It is not allowed to wrap the power cord around the device, this may cause the cord to malfunction.
- Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet. Failure to do so may result in fire, electric shock or burns
- The cord must not be modified, stretched, excessively bent or twisted.
- Nothing heavy may be placed on the cord.
- Prevent dust or other harmful elements from getting into the plug or head by using dust absorbers.
- Do not hit or throw the device. If the device is damaged by impact or falling, you cannot continue to use it.
- Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

## Preparation before use


- Make sure the head speed has been set to the minimum level.
- Make sure the cutter is properly locked in place.
- While holding the head, turn on the power button.

## Using the product

- Using the potentiometer, set the desired speed.

## Setting left/right rotation


- The direction of rotation of the working element, can be changed with the switch located next to the potentiometer. Changing the direction of rotation is possible only when **the motor is turned off**.

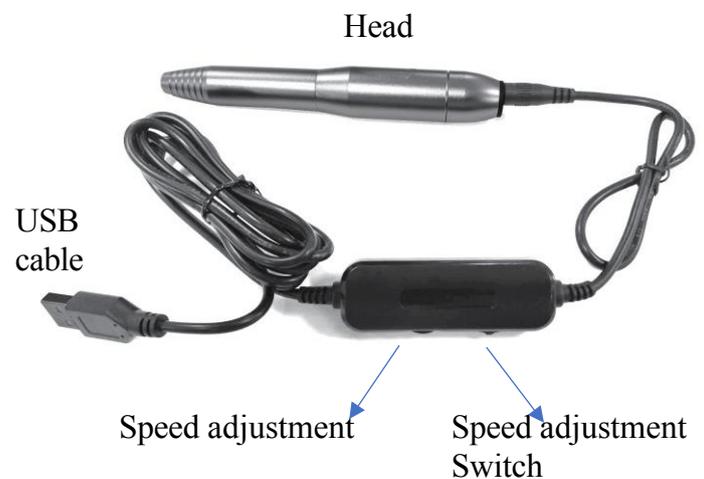


## Cutter replacement

- To replace the cutter, place the switch button in the center-the cutter will stop working, then push the cutter in firmly or pull it out firmly.

Available cutters included:

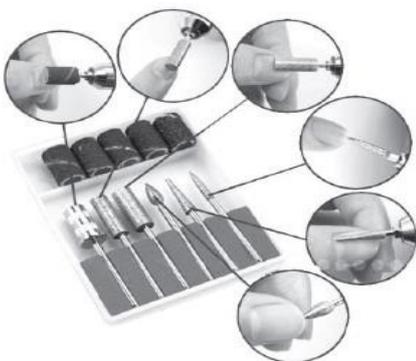

Example of cutter application:

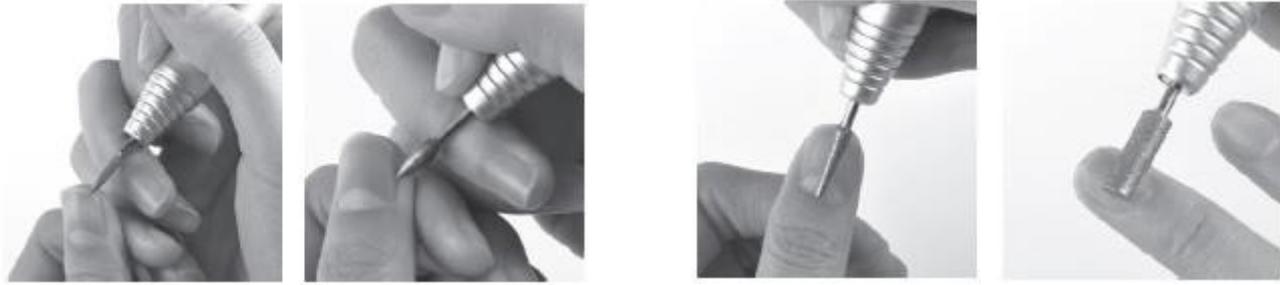

Technical data:

Voltage: 100- 240V ~50/60Hz

Voltage 0.3A

**Milling machine head:**

DC12V voltage

Rated current: 0.14A

No-load speed: 18000-20 000 RPM

Speed with load: 16000- 17500 RPM

## SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases:
  - (a) liquid has gotten into the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet every time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

## CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This appliance can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use of or contact with an electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of reach of children.



## DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical equipment should be collected

separately, and then handed over to collection centers for used electronic and electrical equipment.

At the end of their useful life, as well as old devices contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

## STORAGE AND TRANSPORT

The device should be transported at temperatures in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.