


Instructions Manual

Beauty instrument

F830.N

UTECH BRUSHES

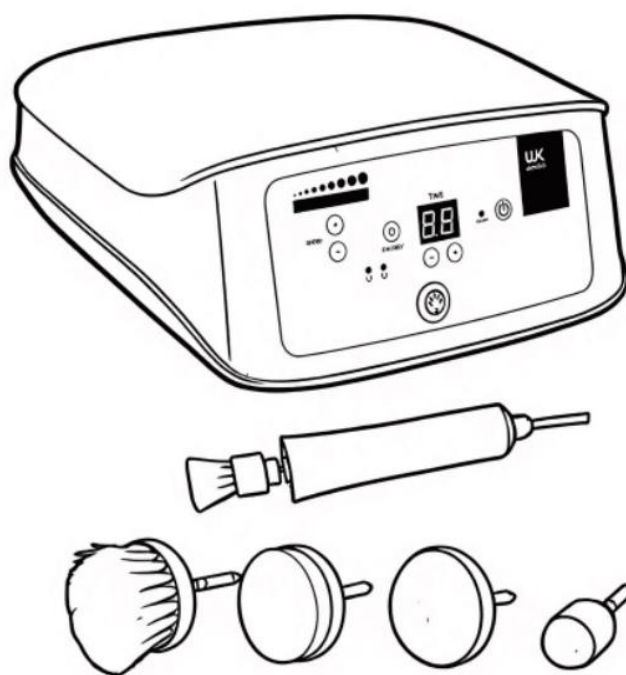

VERSION 1.0

Thank you for choosing our product. This manual is intended to help you operate the device properly. We hope our products and services provide you with an excellent experience.

This manual contains general information about the device. It serves as a guide for new users, explaining the system, working principle, installation, and operation methods.

Safety Precautions

1. Read this manual carefully before use. Operators must fully understand instructions and operation procedures. The device must be managed by designated personnel.
2. Do not use multi plug extension sockets or daisy chained sockets to prevent fire hazards.
3. Turn off the power before replacing the fuse to avoid fire or electric shock.
4. Use only a properly grounded power supply: 220V±22V, 50Hz±1Hz.
5. Do not use damaged or modified power cords; risk of fire or electric shock.
6. Contact the manufacturer immediately if the device is loose, dropped, or damaged.
7. Do not use the device in unstable, vibrating, or impact prone environments.
8. Keep water and foreign objects out of the device. If foreign matter enters, contact us promptly.
9. Unplug the power cord before moving the device.
10. Avoid vibration during transportation.
11. 11. Place the device on a stable surface with at least 5 cm clearance for ventilation and heat dissipation.
12. Do not cover the device; ensure vents are unblocked.
13. Avoid use in: direct sunlight, high humidity, near water, vibration/tilt, strong magnetic fields, electromagnetic interference, surge voltages, chemical storage, or corrosive gas areas.
14. Do not place or operate near radios, TVs, copiers, fax machines, etc.
15. Do not use with other equipment (such as microwaves) to avoid interference and malfunction.
16. If abnormalities occur during use, move the handle away from the user, press STOP, and shut down the device immediately.
17. The device must be operated only by trained technicians; untrained persons are prohibited.
18. Return the control handle to the hanger after use.
19. Clean the handle probe after each use for next application.

Troubleshooting, Storage & Maintenance

1. Do not use the device if it malfunctions. If smoke, burning odor, or failure occurs, continue use may cause fire or electric shock. Press STOP, turn off power, unplug, and contact the manufacturer or distributor immediately.
2. Do not disassemble, repair, or modify the device unless by qualified technicians. Do not open the internal casing.
3. Inspect the device and components regularly.
4. Do not use cleaning tools that may scratch or damage the protective coating.
5. If the device has not been used for more than 2 weeks, inspect it thoroughly before reuse.

Contraindications (Do NOT use if you)

- Have a cardiac pacemaker, defibrillator, or metal implants (plates, screws, etc.).
- Are pregnant, breastfeeding, or menstruating.
- Have epilepsy, hypertension, severe heart disease, diabetes, tumor/cancer, or thyroid disease.
- Have open wounds, broken skin, severe inflammation, eczema, dermatitis, facial telangiectasia, or rosacea.
- Have received botulinum toxin, fillers, laser, chemical peeling, or plastic surgery within the past 6 months.

Suitable Users

- Healthy adults for daily skin care.
- Use with caution if you have sensitive skin, active acne, wounds, or damaged skin.
- Pregnant/breastfeeding users or those with skin diseases or other medical conditions should consult a physician before use.

Pre-Use Preparation


1. Clean the main unit and accessories before use to remove stains and cosmetic residue.
2. Clean your face and apply toner, serum, or other easily absorbed products; avoid thick creams.

Shutdown & Cleaning

After use, wipe the treatment head with a clean soft cloth or cotton pad to remove residue. Store in a dry, ventilated place.

Important Notes

1. This device is a skin care auxiliary tool, not for medical use. It does not replace medication or professional aesthetic treatment.
2. Keep the treatment head in contact with skin during operation; avoid “empty operation” to maintain performance and service life.
3. Do not overuse. Recommended: once per day or every other day. Overuse may irritate the skin.
4. If you feel heat, stinging, or discomfort, stop use immediately. Consult a professional if symptoms persist.

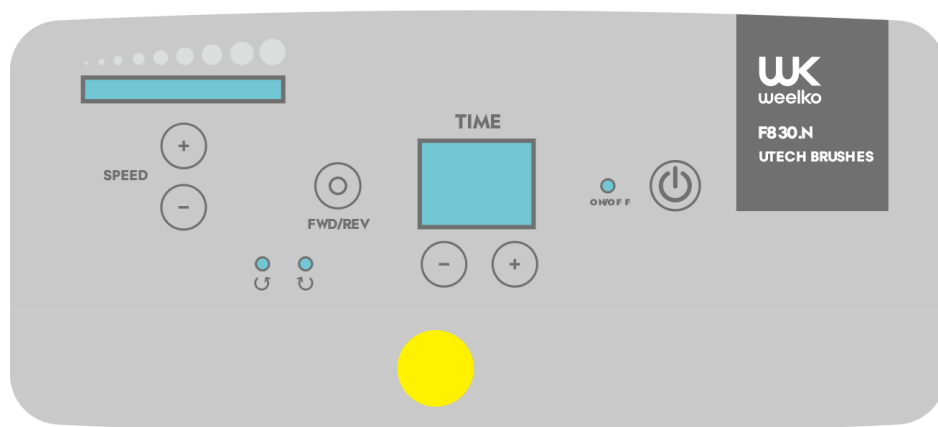

Operation Instructions

1. Connect the device to AC 220V power. A beep indicates power on and standby. The display shows default time: 15 minutes, default speed: level 1.
2. Press the +/- buttons near the TIME display to adjust working time: 1–30 minutes, 1-minute increments.
3. Press the SPEED +/- buttons to adjust rotation speed: 1–10 levels (10 = max).
4. Press FWD/REV to switch the treatment head rotation direction (clockwise / counterclockwise).
5. When time ends, three beeps sound; the function stops, time resets to 15 minutes, speed resets to level 1.

Package List

Name	Image Quantity
Main Unit	1 pc
Cleansing Brush Handle	1 pc
Replacement Brush Heads	5 pc
Power Cord	1 pc

Specifications

- Input voltage: AC220V–240V
- Frequency: 50/60Hz
- Power: 5W
- Package size: 34×34×20cm
- Gross weight: 2.7kg
- Net weight: 2.2kg



Imported by
WEELKO BARCELONA SL

Pol. Ind. La Valldan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain T.
+34 93 824 90 20
E. info@weelko.com